
Engine MD2010A, MD2020A, MD2030A, MD2040A

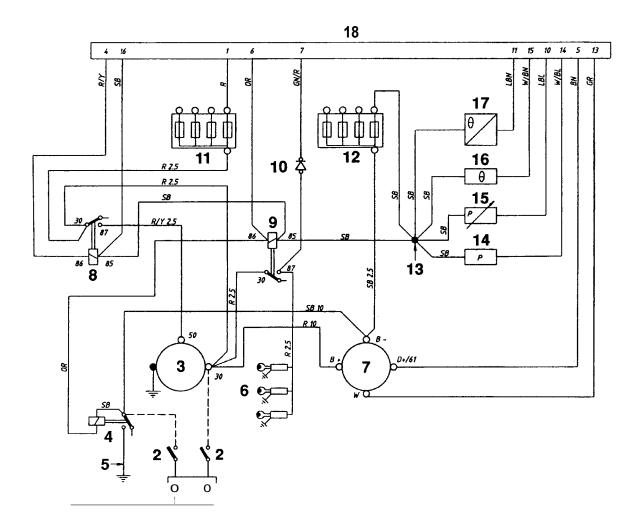

- 1. Battery
- Main switch 2.
- Startermotor 3.
- Earthing relay 4. 5. Earth rail
- 6. Glow plug* 7. Alternator
- 8. Starter relay
- * MD2O10: 2 pcs. Other engines: $_{3 pcs}$

Cable colours

- 9. Glow relay
- 10. Protective diode
- 11. Fuses (4 pcs), max. 15A (+)
- 12. Fuses (4 pcs), max. 15A (-)
- 13. Splice
- 14. Oil pressure relay, engine (normally
- open, closed at 0.3 bar ±0.1 bar Oil pressure sensor
- 15.

- 16. Refrigerant temperature relay (normally open, closes at 95°C ±3°C, 203,2 °Ft5.6°F)
- Refrigerant temperature sensor 17.
- 18. Connector, 16-pole

Cable areas in mm² are given after the colour code in the wiring diagram.

Areas not given = 1.0 mm^2 .

Dashed cables are not included from Volvo Penta.